




## 45" Reflector Assembly Instructions

For more information, refer to the main Light System Instructions.

- 1 Set aside the cone-shaped housing and lay the 4 reflector pieces, white side down on a piece of carpet so you don't scratch the paint. Overlap the edges of 2 pieces. Insert screws from the bottom up and attach nuts. After 4 pieces are attached, pull the reflector up into a cone and insert the remaining 4 screws and screw on their nuts, then tighten all nuts.
- 2 Do not plug in the unit.
- 3 Insert the socket assembly through the reflector from the top. Pull the reflector back several feet along the length of the cord.
- 4 Insert the socket down in through the top of the housing.
- 5 Align the 2 holes on the mounting disc with the holes on the housing.
- 6 Take the 2 eyebolt/nut combinations out of the hardware bag and make sure their nuts are threaded all the way up the neck of each eyebolt.
- 7 Insert the eyebolts down through the mounting disc and housing.
- 8 Screw on the 2 locknuts from the hardware bag, from inside the housing. Make sure the eyebolts are aligned in parallel so hanger will insert easily.
- 9 Hand-tighten the locknuts from inside the housing. Using a crescent wrench or pliers, firmly tighten the eyebolt nut on top of the mounting disc.
- 10 Slide the reflector back over the housing.
- 11 Insert the hanger ends into each eyebolt.
- 12 Use a strong cord or chain to hang the fixture and run it through a strong eyebolt or closed swag hook in the ceiling.

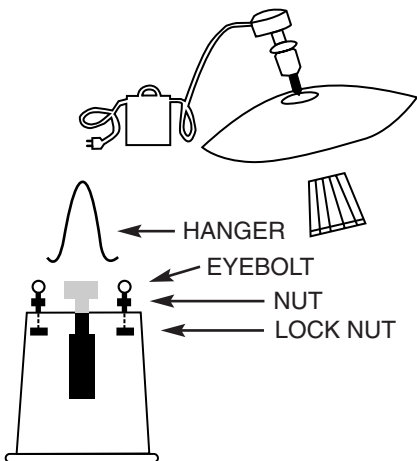

**DO NOT HANG THE FIXTURE BY THE ELECTRICAL CORD**


- 13 Route the electrical cord up and away from the light to another hook (not provided) and down the wall to the ballast location.
- 14 Now, making sure the unit is still unplugged, screw the bulb in carefully so it is firm but not too tight. Make sure the ballast is sitting on a firm, dry surface.



## 45" Reflector Assembly Instructions

For more information, refer to the main Light System Instructions.

- 1 Set aside the cone-shaped housing and lay the 4 reflector pieces, white side down on a piece of carpet so you don't scratch the paint. Overlap the edges of 2 pieces. Insert screws from the bottom up and attach nuts. After 4 pieces are attached, pull the reflector up into a cone and insert the remaining 4 screws and screw on their nuts, then tighten all nuts.
- 2 Do not plug in the unit.
- 3 Insert the socket assembly through the reflector from the top. Pull the reflector back several feet along the length of the cord.
- 4 Insert the socket down in through the top of the housing.
- 5 Align the 2 holes on the mounting disc with the holes on the housing.
- 6 Take the 2 eyebolt/nut combinations out of the hardware bag and make sure their nuts are threaded all the way up the neck of each eyebolt.
- 7 Insert the eyebolts down through the mounting disc and housing.
- 8 Screw on the 2 locknuts from the hardware bag, from inside the housing. Make sure the eyebolts are aligned in parallel so hanger will insert easily.
- 9 Hand-tighten the locknuts from inside the housing. Using a crescent wrench or pliers, firmly tighten the eyebolt nut on top of the mounting disc.
- 10 Slide the reflector back over the housing.
- 11 Insert the hanger ends into each eyebolt.
- 12 Use a strong cord or chain to hang the fixture and run it through a strong eyebolt or closed swag hook in the ceiling.

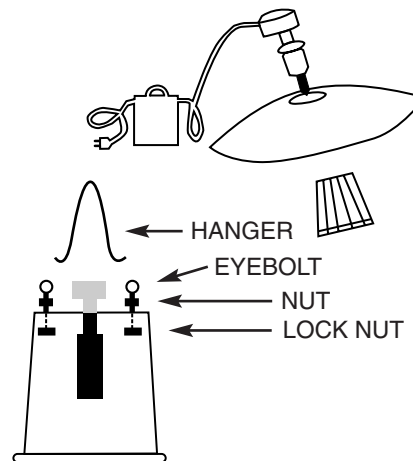

**DO NOT HANG THE FIXTURE BY THE ELECTRICAL CORD**

- 13 Route the electrical cord up and away from the light to another hook (not provided) and down the wall to the ballast location.
- 14 Now, making sure the unit is still unplugged, screw the bulb in carefully so it is firm but not too tight. Make sure the ballast is sitting on a firm, dry surface.